

## D5411 D5412 D5413 D5414 D5415

### Digital Amplifier



#### Description

The digital power amplifier adopts advanced digital chip processing technology and high-fidelity digital modulation circuit, which makes the output sound fuller, and the intermediate frequency more transparent. It is the best supporting equipment for high-end sound reinforcement system.


#### Features

- Designed with a display screen.
- With optional DANTE digital inputs.
- With built-in 4 channels of analog inputs.
- Adopt PWM ultra-high-power design.
- With 0.7V and 1.4V input signal conversion.
- Can be applied to conference rooms, medium and large conference rooms, courts, auditoriums, and multi-function halls.

#### Specifications

Model	D5411	D5412	D5413	D5414	D5415
Rated Power (8Ω)	4*700W	4*900W	4*1300W	4*1500W	4*1800W
Input Level	0.77V & 1.44V				
Input Connector	XLR female				
Input Impedance	20KΩ balanced				
Input CMRR	> 80dB				
Output Connector	Speakon				
SNR	> 112dB				
Damping Factor	> 1000 @ 8Ω				
THD	<0.1%(20 Hz-20 kHz 1W)				
Frequency Response	20Hz-20KHz(+0/-0.3dB,1W/8Ω)				
Cooling Method	Continuously variable fan, air flow from front to back				
Protection	Short circuit, open circuit, DC voltage, overheating, overvoltage, RF, VLF protection				
Power Supply	AC180-240V 50-60Hz				
Machine Dimensions	483×419×88mm				
Package Dimensions	595×545×145mm				

## Front Panel

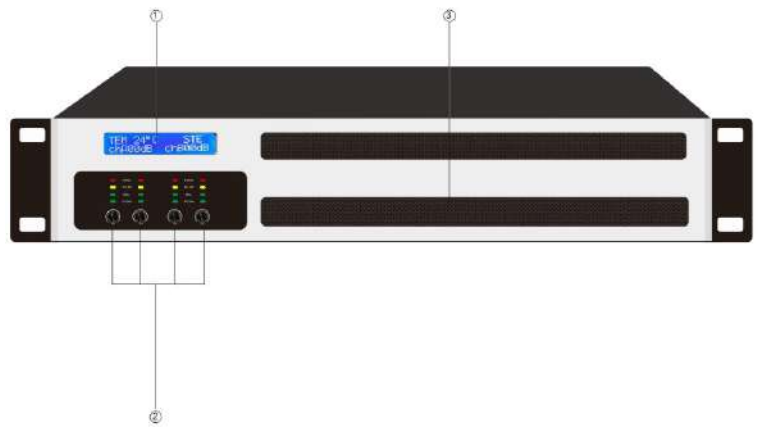

### 1. LED dot matrix display

When the device is powered on normally, the LED dot matrix screen displays the device status, the corresponding device volume, and the device temperature state. When adjusting the device status mode, the display status will change accordingly. When adjusting the device volume knob, the corresponding volume value on the LED display will also change at the same time. Besides, the corresponding temperature display value will also change as the temperature of the device increases.

### 2. Channel Volume Adjustment & Indicator Status Indication

#### Volume Potentiometer

When there is a signal input, adjusting the volume potentiometer will change the speaker volume, which can be adjusted according to the actual sound pressure level requirements. Turn counterclockwise to decrease the volume of the device, and clockwise to increase the volume of the device.

#### Channel POW Indicator

When the device is powered on normally, the POW indicator is always on, and when the device is powered off, the POW indicator is off. The device can work normally only when the POW indicator of the device is always on.

#### Channel SIG Indicator

When there is a signal input from the front end of the device, the SIG indicator will flash, and when there is no signal input from the front end, the SIG indicator is off.

#### Channel CLIP Indicator

When the input signal of the device is too strong, the CLIP indicator will flash. In this case, you need to reduce the signal of the front-end mixer or the front-stage matrix, or to reduce the signal through the volume potentiometer of the amplifier.


#### Channel PRO Indicator

When the device is in normal use, the PRO indicator does not light up. When the device is overloaded or overheated, the indicator will light up, and the speaker will have no sound or a distorted sound. In this case, the device should be shut down for troubleshooting and then can be used normally.

### 3. Cooling Channel

Please keep the heat dissipation channel unobstructed, and do not block the cooling channel with external objects to avoid heat dissipation failure.

## Rear Panel

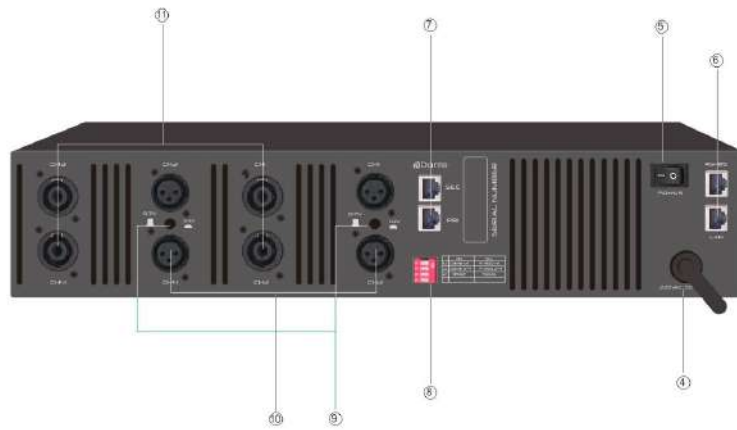

### 4. AC Power Cord

Before plugging in the AC plug, make sure there are no external objects or water droplets on the device.

### 5. Power Switch

The on/off control of the device can be realized through the switch. TCP, UDP and RS485 control are not affected by the switch.

### 6. LAN & RS485

Remote on/off module (expandable).

### 7. Dante Digital Network Interface (Expandable)

Digital audio communication with the front-end Dante device can be realized through the interface.

### 8. DIP Switch

Switch among DANTE, analog signal and stereo bridge modes.

	ON	OFF
4	Dante 1-2	Analog 1-2
3	Dante 3-4	Analog 3-4
2	Bridge	Stereo
1		

### 9. Level Switching Switch

Switch between 0.77V and 1.44V input levels.

### 10. CH1, CH2, CH3 & CH4 Analog Audio Input Interfaces

Adopt XLR balanced input mode, pin 2 for +, pin 3 for -, and pin 1 for GND.

### 11. Speaker Connectors

CH1, CH2, CH3, CH4 SPEAKON interfaces

The +1 and -1 ends of the CH1 and CH2 are connected to the speaker for stereo output.

The +1 and +2 ends of the CH1 are connected to the speaker for bridged output.

### CH3 & CH4 Audio Input Interfaces

The CH3 supports AES digital audio input, and both CH3 and CH4 support analog signal input.

### CH3 & CH4 SPEAKON interfaces

The +1 and -1 ends of the CH3 and CH4 are connected to the speaker for stereo output.

The +1 and +2 ends of the CH3 are connected to the speaker for bridged output.